 


GreenStar™ 2 Display 1800 SYSTEM QUICK REFERENCE GUIDE

Controls

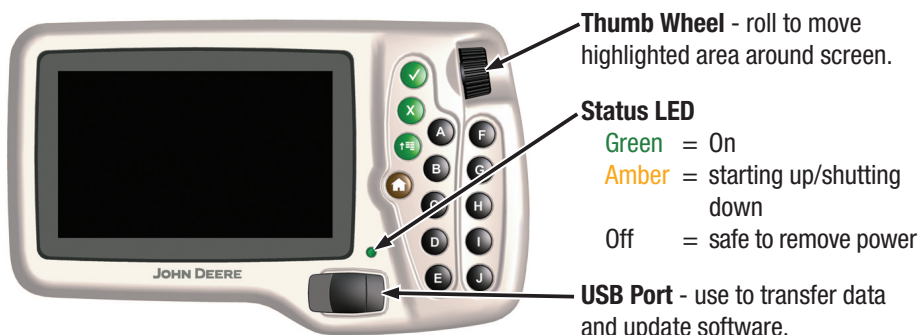

- Check button** - select input fields, buttons, or softkeys.
- Cancel button** - cancel out of a selection.
- Menu button** - list available applications and controllers.
- Home button** - toggle between three personalized homepages.

A through **J** **shortcut buttons** - select desired inputs as labeled on display.

Main Menu

 
- Performance Monitor** - provides productivity information such as vehicle speeds, acre counters, and fuel efficiency data.
- GreenStar** - Access GreenStar applications.
- Original GreenStar Monitor** - Display information from controllers that are designed for use with the Original GreenStar Monitor.
- Display** - Set time, date, regional settings, language, units, brightness levels, and speaker volume.
- Layout Manager** - Set up three personalized homepages.
- Message Center** - Access diagnostic information and initiate re-programming sessions.

* Application icons will also appear for any attached ISO implement controller such as StarFire iTC, GS2 Rate Controller, or SeedStar2.

Navigation Tips

Drop-Down Box


(Contains a list of items)



- Press to select a highlighted drop-down box and see the list.
- Rotate the thumb wheel to choose an item from the list.
- Press to select the item.
- Press to exit drop-down box.

Text Entry

 - Rotate thumb wheel to choose character.
- Press to enter character.
- Select Shortcut Button to accept name.

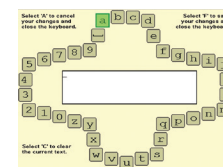

A corner arrow means this softkey will take the user to another page.

Homepage Set-Up

(Set up three homepage layouts.)


- Highlight "Region" drop-down box and press .
 - Choose the region you would like to setup (such as Homepage 3) and press .
 - Highlight the page image in the center of the screen and press .
 - Rotate the thumb wheel to scroll through the available pages.
 - Press to select the desired page.
 - Check box to include page in homepage cycle ☒
- * After setting up the homepages, press repeatedly to cycle through the active homepages.

Performance Monitor

- | | | |
|-------------|--|-------------------|
| Wheel Speed | Instantaneous Productivity (Area/Hour) | Fuel per Hour |
| Radar Speed | Area Counter | Wheel Slip (%) |
| GPS Speed | Distance Counter | Water Temperature |
| Front PTO | Fuel per Area | Oil Pressure |
| Rear PTO | | |

GreenStar™ 2 Display 1800 SYSTEM QUICK REFERENCE GUIDE

 GreenStar™ Main Page

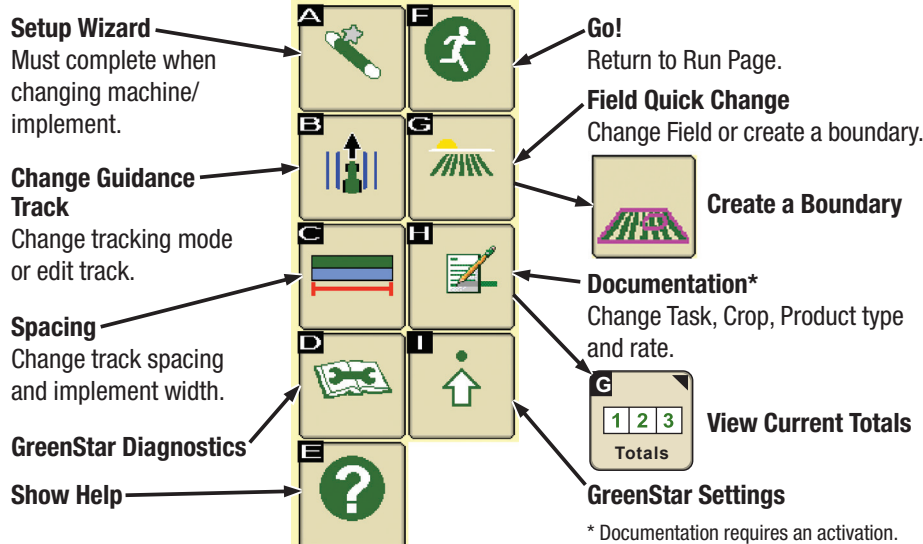

Setup Wizard
Must complete when changing machine/ implement.

Change Guidance Track
Change tracking mode or edit track.

Spacing
Change track spacing and implement width.

GreenStar Diagnostics

Show Help

Go!
Return to Run Page.

Field Quick Change
Change Field or create a boundary.

 
Create a Boundary

Documentation*
Change Task, Crop, Product type and rate.

View Current Totals

GreenStar Settings
* Documentation requires an activation.

Run Page

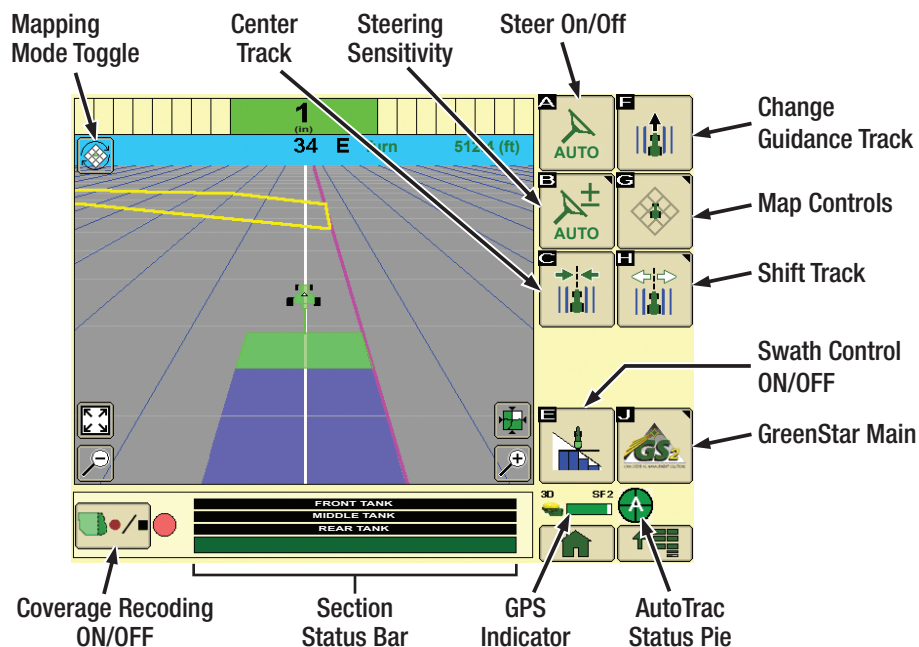

Mapping Mode Toggle

Center Track

Steering Sensitivity

Steer On/Off

Change Guidance Track

Map Controls

Shift Track

Swath Control ON/OFF

GreenStar Main

 
Coverage Recording ON/OFF

Section Status Bar

GPS Indicator

AutoTrac Status Pie

GreenStar Settings

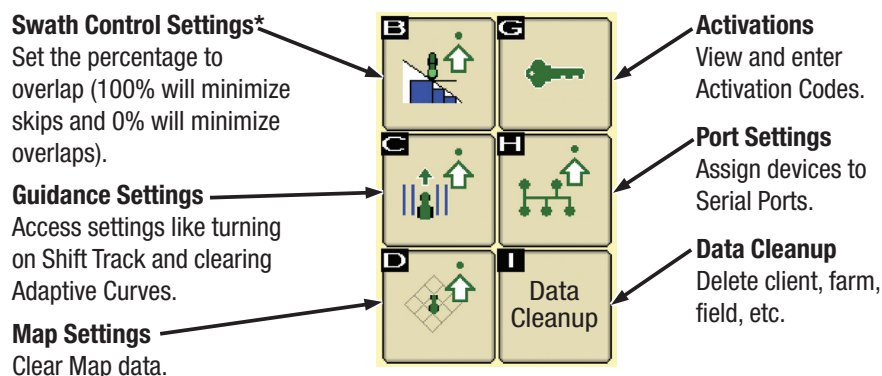

Swath Control Settings*
Set the percentage to overlap (100% will minimize skips and 0% will minimize overlaps).

Guidance Settings
Access settings like turning on Shift Track and clearing Adaptive Curves.

Map Settings
Clear Map data.





Activations
View and enter Activation Codes.

Port Settings
Assign devices to Serial Ports.

Data Cleanup
Delete client, farm, field, etc.

 
* Swath Control requires an activation.

AutoTrac™ Status Pie

-  • **INSTALLED** – AutoTrac™ hardware is installed.
-  • **CONFIGURED** - Valid AutoTrac™ Activation, Tracking Mode has been determined and a valid Track 0 has been established. Correct StarFire signal level for AutoTrac™ Activation is selected (SF1, SF2, or RTK).
-  • **ENABLED** - Steer On/Off softkey has been pressed.
-  • **ACTIVATED** - Resume switch is pressed and AutoTrac™ is steering.

Coverage Recording Source

Select the function that turns Recording ON and OFF in the Setup Wizard.

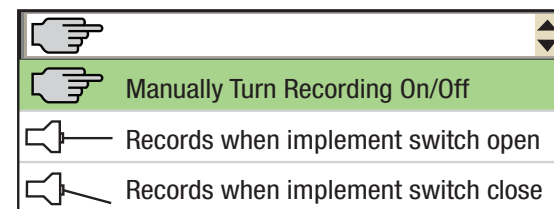

Manually Turn Recording On/Off

Records when implement switch open

Records when implement switch close