 


GreenStar™ Rate Controller NH³ QUICK REFERENCE GUIDE

Documentation and Equipment Setup

Select Main Menu button



Select GreenStar button




Select Resource/Conditions button to setup and access:



- Client
- Farm
- Field
- Task

Select Equipment button to setup and access:

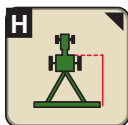

Equipment Tab

- Machine information
- GPS & Hitch Offsets
- Connection Type

Implement Tab

- Implement information
- Implement widths and offsets

Equipment and Implement Setup is Optional for GreenStar Rate Controller and required for Swath Control Pro.

Getting Started



1. Select Main Menu button.....



2. Select GreenStar Rate Controller button.....
Each GreenStar Rate Controller will have a dedicated icon.



3. Select the Setup button to setup and access.....

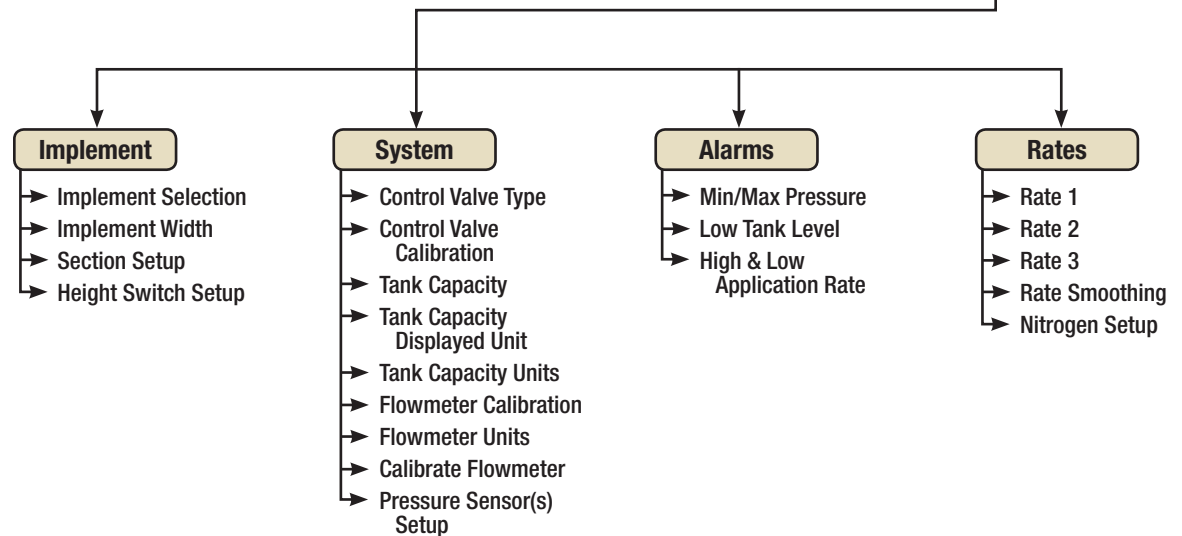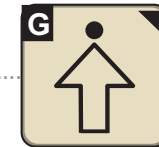


For detailed setup instructions please refer to the GreenStar Rate Controller Operator's Manual and the GS2 Basic Operator's Manual.

GreenStar™ Rate Controller NH³ QUICK REFERENCE GUIDE

Getting Started (cont)

4. Select Totals button for access.....

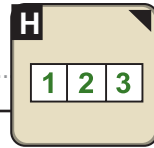

Current

- View Summaries
- Clear Summary

Job Summaries

- Job Summary
- Add/Remove Jobs

Lifetime

- Lifetime Totals

5. Select Diagnostics button. Each GreenStar Rate Controller..... will have a dedicated icon.



Readings

- Hardware/Software
- Switchbox
- Delivery System
- Section Status
- System Voltages
- Working Parameters
- Switches/Status
- Sensors/Status

Tests

- Calibrate Flowmeter - Applied
- Energize System
- Control Valve Test
- Bleed Section Test
- Calibrate Pressure Sensor



Main Rate Controller Screen

Master Switch Indicator/Implement Height Switch Indicator

Speed

Actual Rate

Target Rate

Section Indexing

Rate Selection Dropdown Menu

Information Dropdown Menu

The main screen displays the following information:

- Actual Rate:** 0.0 lb NH₃/ac
- Target Rate:** 120.0 lb NH₃/ac
- Speed:** 0.0 mi/h
- Flowrate:** 0.0 gal/min
- Master Switch:** Off
- Implement Height:** 0 (%)
- Section Indexing:** L3, L2, L1, C, R1, R2, R3
- Rate Selection:** Predefined (A Rate 1: 120.0, B Rate 2: 150.0, C Rate 3: 180.0)
- Information:** 0.0 ac/h
- Time:** 12:58pm

Predefined Rates

For detailed setup instructions please refer to the GreenStar Rate Controller Operator's Manual and the GS2 Basic Operator's Manual.